


## SHOWER TILE INSTALLATION INSTRUCTIONS

### Tools:


- Rubber mallet to lock the tiles in place
- Utility knife or saw (*suitable for vinyl tiles*)
- Measuring tape, square or straight edge
- Bench (*for leverage when cutting tiles*)
- Knee pads

### Preparation and Installation of 12" x 12" tiles:

1. Repair or patch any major imperfections such as large cracks or holes.
2. Clean, sweep or vacuum the floor of all dirt.
3. Be sure to start on the side with the longest and straightest wall.
4. Place the first tile in a corner as shown in the diagram below.

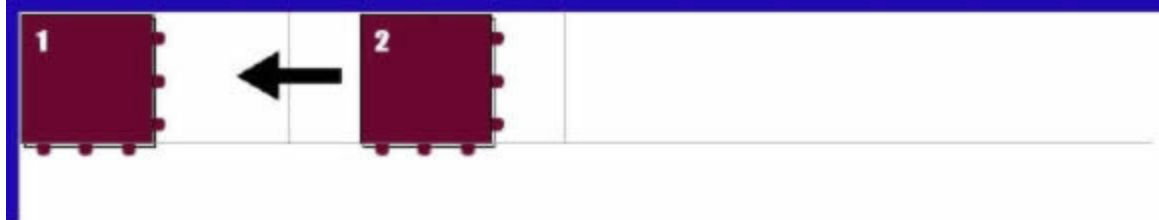


5. Leave 1/2" space from the wall for expansion.
6. Install the next tile over the interlocking connector edge of each adjacent tile and press it into place with a rubber mallet or by hand.

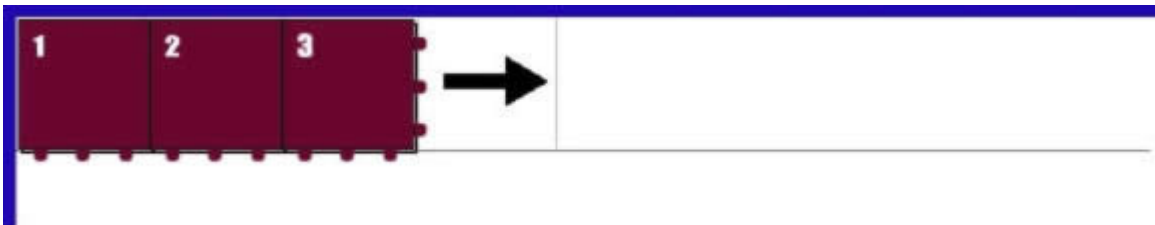

7. All tiles must be oriented the same way.

8. Complete one row at a time.

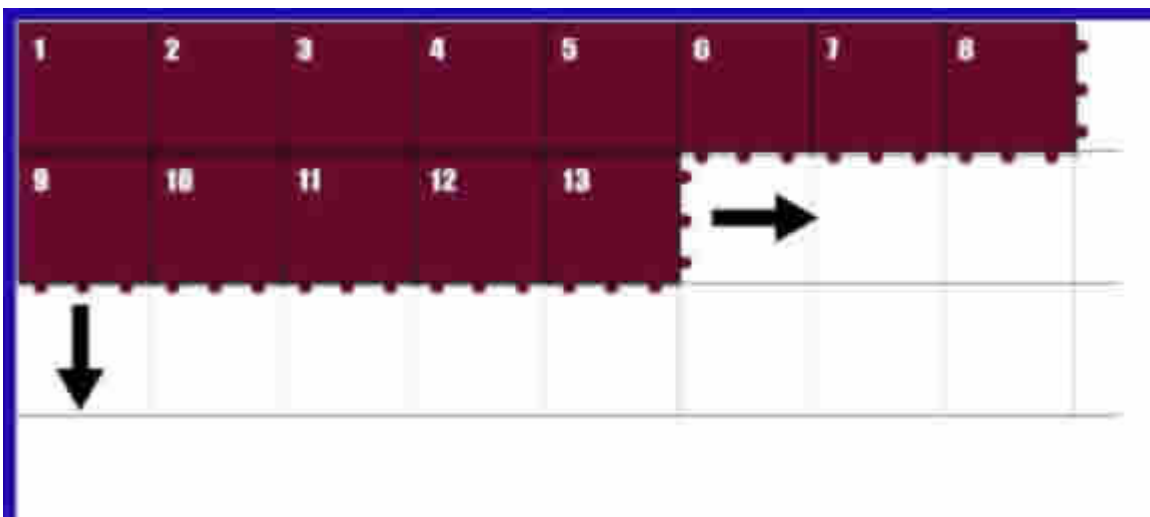

#### **Cutting the Tiles:**

If cutting is necessary, use a square or straight edge to measure where you want to cut the tile, then score the tile with a utility knife several times.

Use the utility knife or table saw and complete the cut by placing the score line just over the edge of a bench while bending it downward to open the score line.

#### **Maintenance**

- Apply ammonia and water or detergent.
- Use power scrubber or buffer.

Avoid all waxes and sealants.